





MOBMAN™














www.mobman.ro



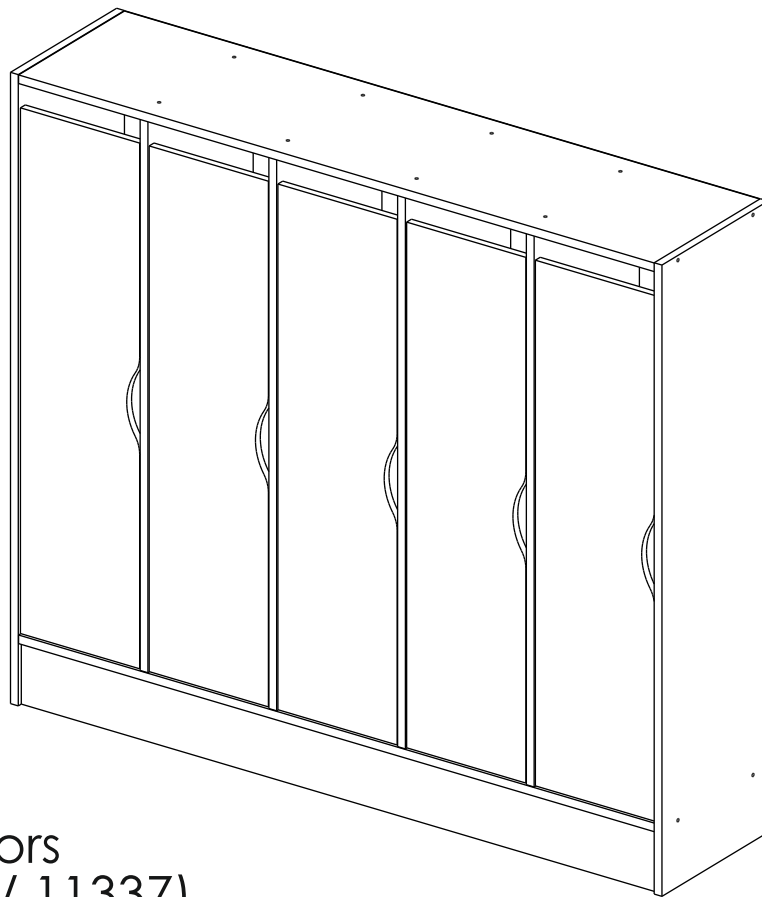


Corpus for Oliver 5 doors
(Model 11335 / 11336 / 11337)

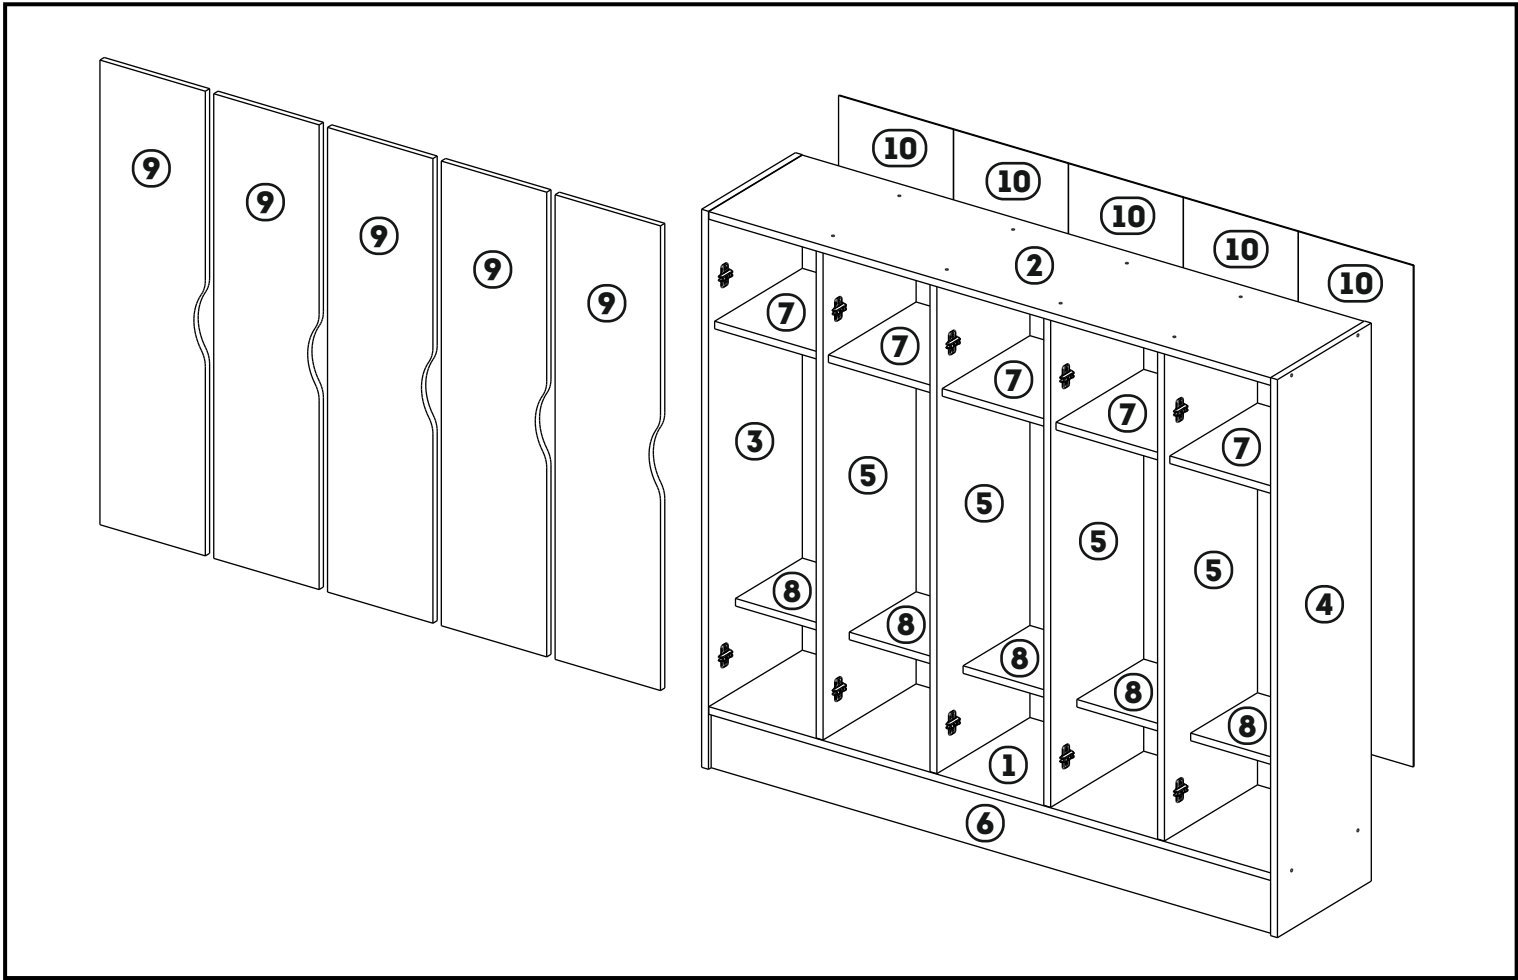

No	a*b	X
1	1472x350	1
2	1472x350	1
3	1321x351	1
4	1321x351	1
5	1154x348	4
6	1472x130	1
7	280x328	5
8	280x250	5
9	1100x276	5
10	1187x301	5

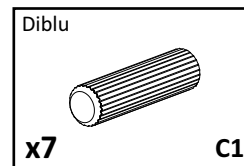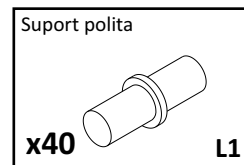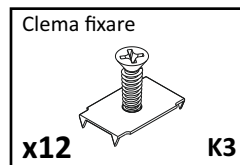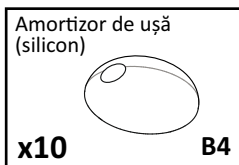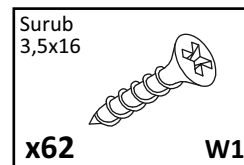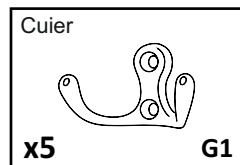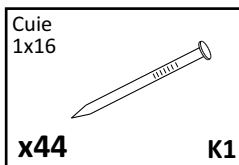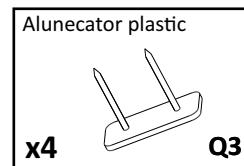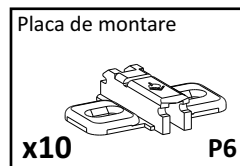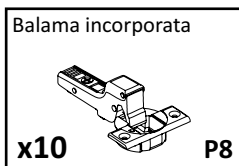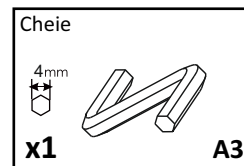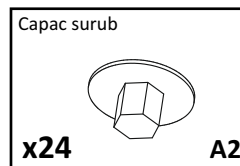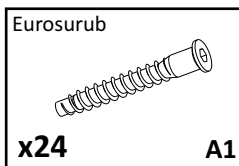

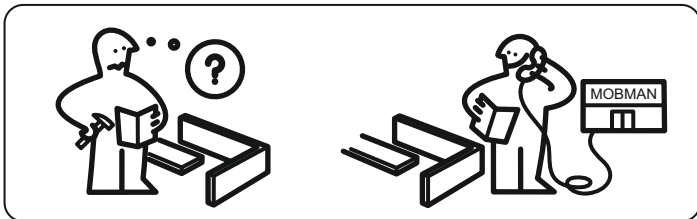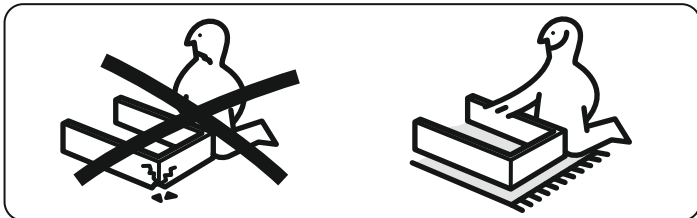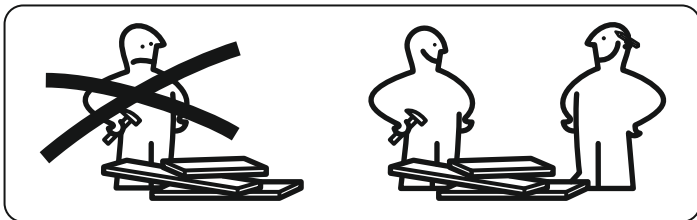

**ASISTENTA: 0371.71.79.79 SAU
OFFICE@MOBMAN.RO**



MOBMAN™


www.mobman.ro

INSTRUCTIUNI TEHNICE GENERALE PENTRU MONTAJ MOBILIER

- VERIFICATI COMPATIBILITATEA PIESELOR SI ACCESORIILOR INAINTE DE MONTAJ.
- PENTRU MONTAJUL MOBILIERULUI, RECOMANDAM FOLOSIREA SERVICIILOR PERSOANELOR CALIFICATE.
- FACETI MONTAJUL PE O SUPRAFATA ACOPERITA CU PANZA SAU CARTON PENTRU A EVITA ZGARIETURILE.

INGRIJIREA SI INTRETINEREA MOBILIERULUI







- EVITATI CONTACTUL PRELUNGIT CU APA SAU CU ABURI.
- PASTRATI O DISTANTA CORESPUNZATOARE FATA DE APARATE ELECTRICE SI INCALZITOARE.
- INDEPARTATI MURDARIA CU O CARPA UMEDA APOI STERGETI. NU UTILIZATI MATERIALE ABRAZIVE.

1Surub
3,5x16**x30****W1**

Placa de montare


**x10****P6**

Cuiier

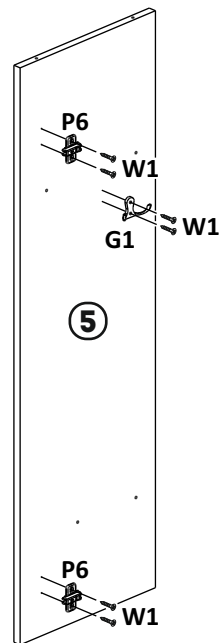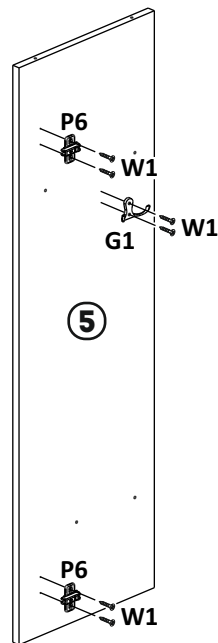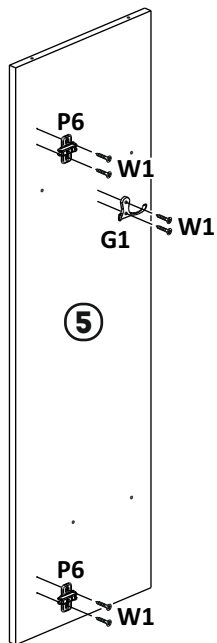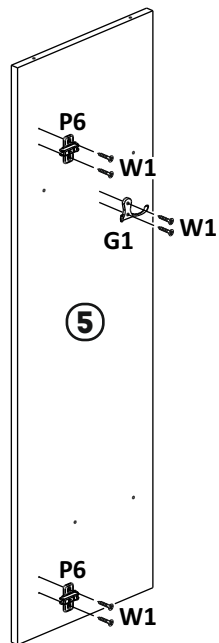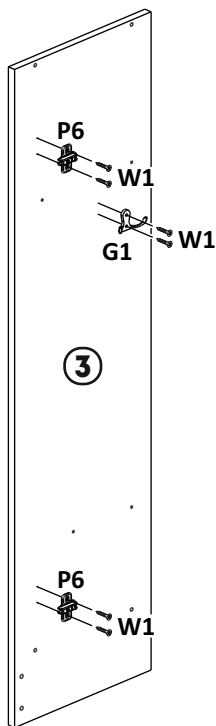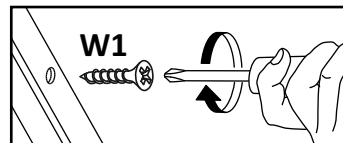**x5****G1**

2


Eurosurub



x16


A1

Capac surub




x16

A2

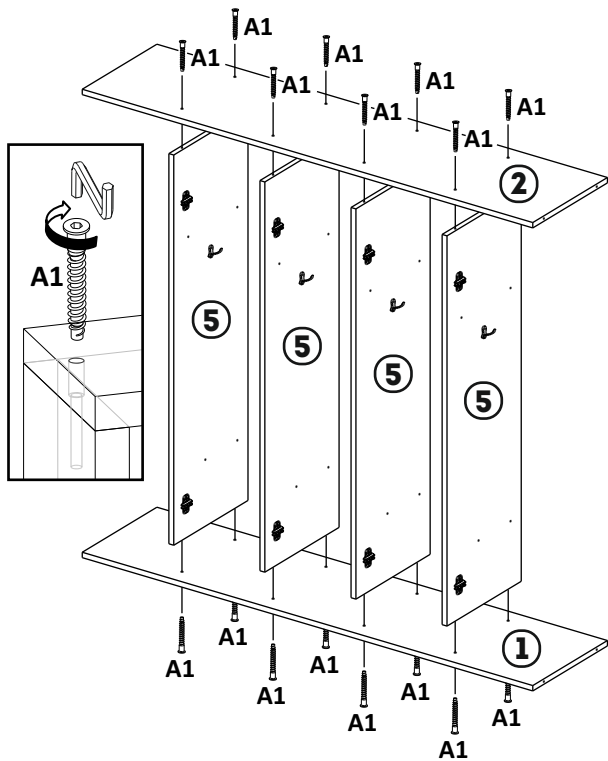**3**


Eurosurub



x8

A1


Suport polita



x40


L1

Diblu



x7


C1

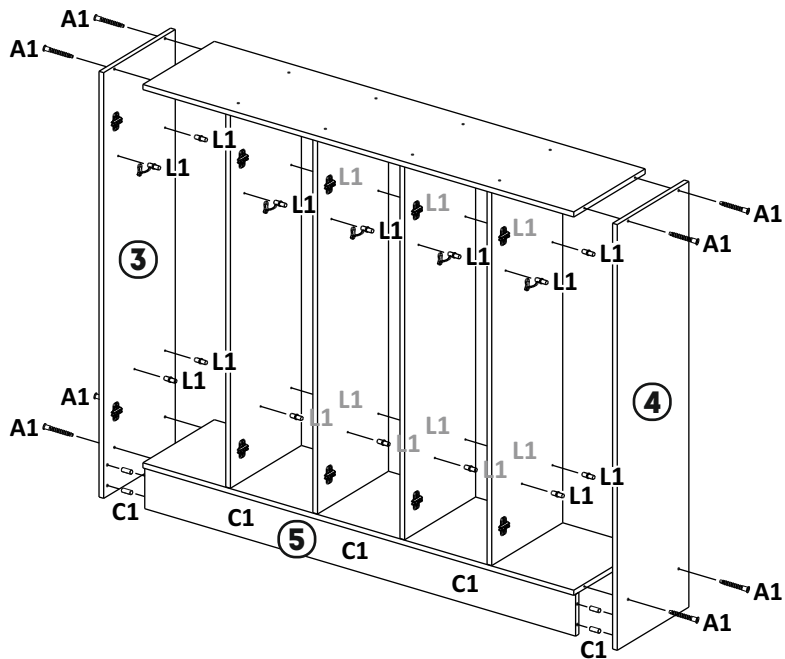

4

Alunecator plastic


x4





Q3

Clema fixare

x12





K3

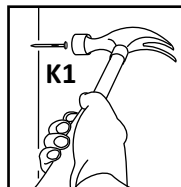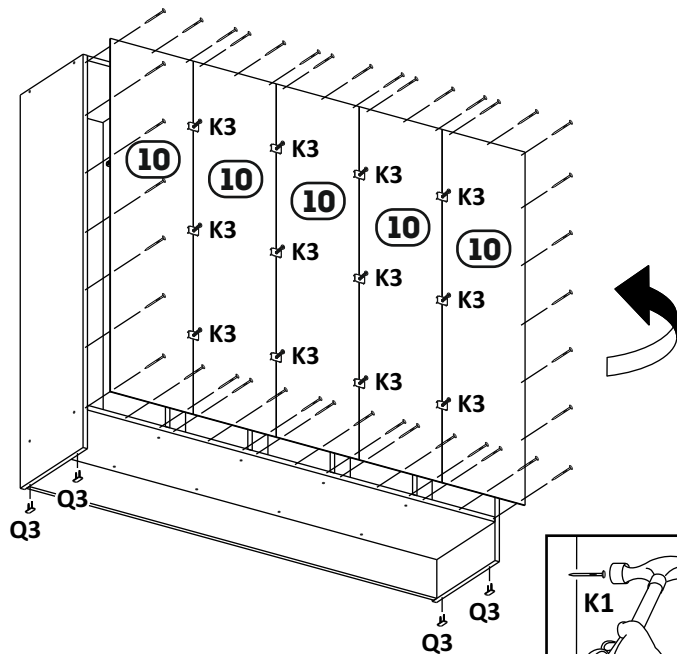**5**Amortizor de ușă
(silicon)

x10




B4

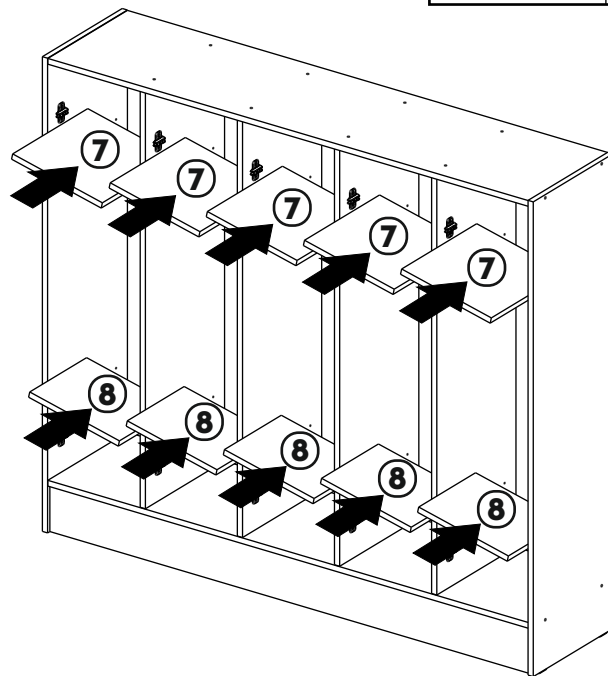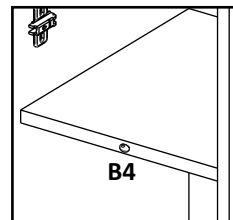


6

Balama incorporata








x2

P8

Surub
3,5x16

x4

W1

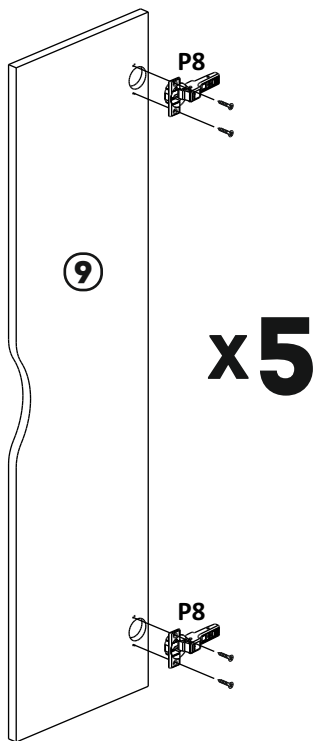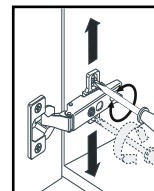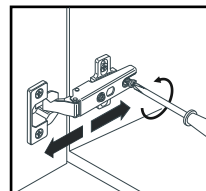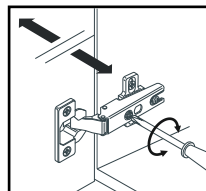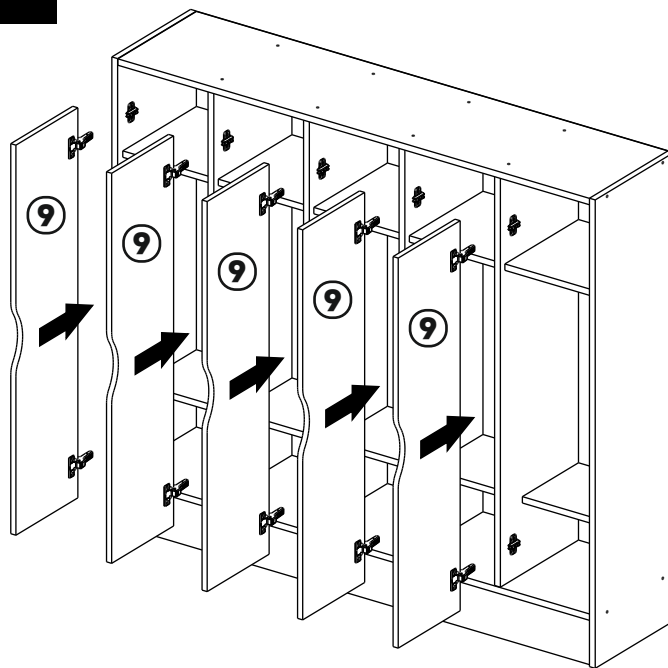**7****8**