



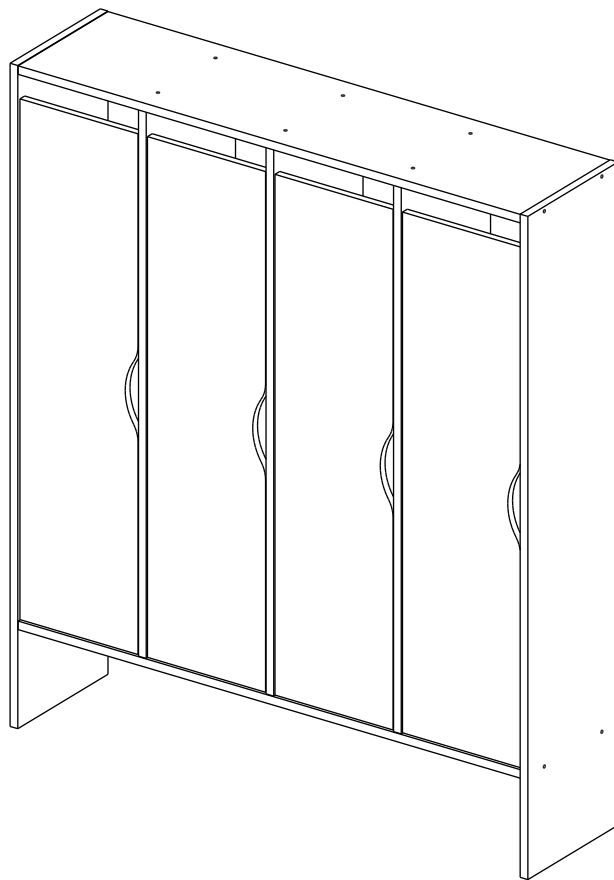


MOBMAN™

















www.mobman.ro



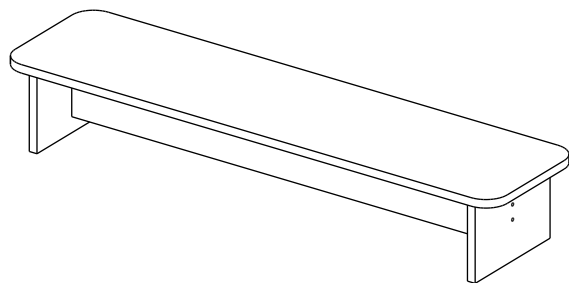


Vestiar gradinita
Oliver PRO cu 4 usi
(11341 / 11342 / 11343)

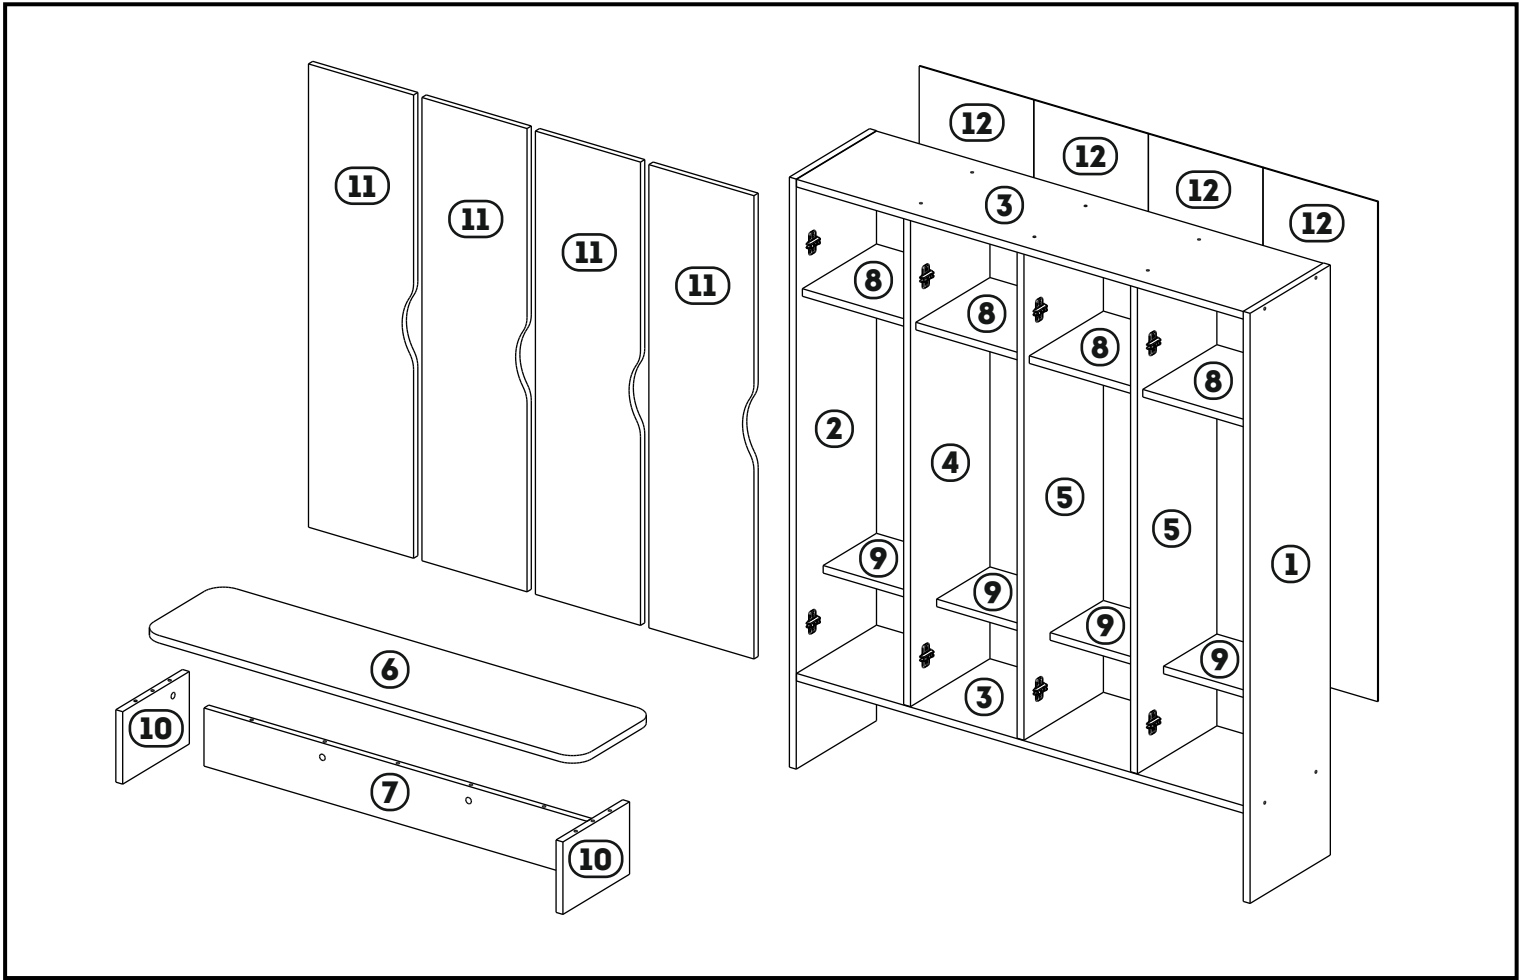

No	a*b	X
1	1401x301	1
2	1401x301	1
3	1174x300	2
4	1155x298	1
5	1155x298	2
6	1150x290	1
7	138x1006	1
8	280x278	4
9	280x200	4
10	172x250	2
11	1100x276	4
12	1187x301	4

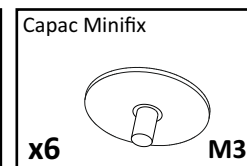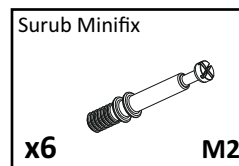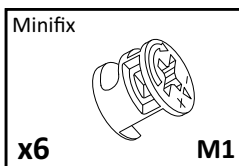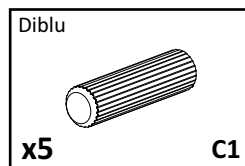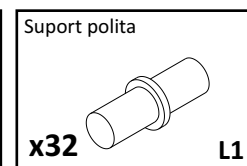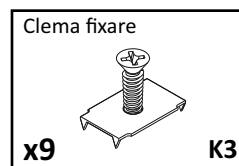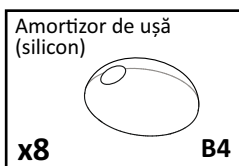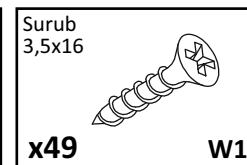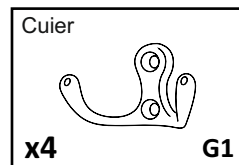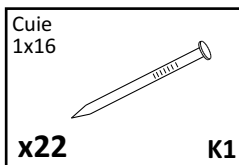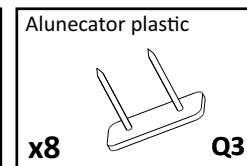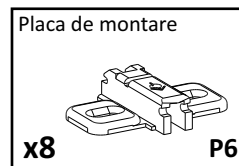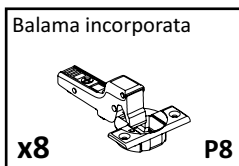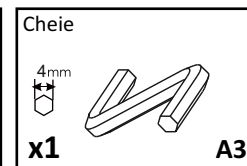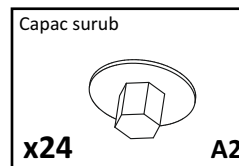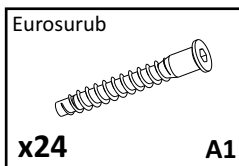

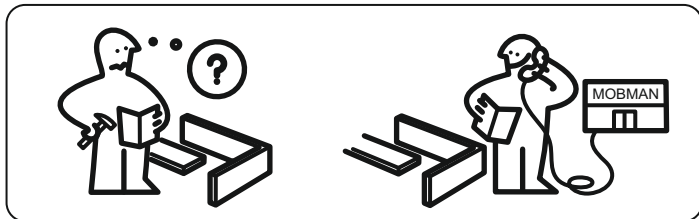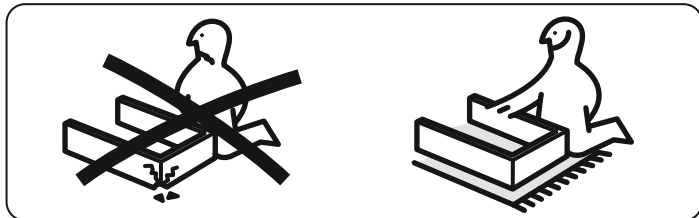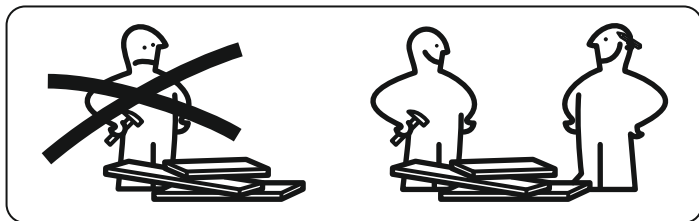

**ASISTENTA: 0371.71.79.79 SAU
OFFICE@MOBMAN.RO**



MOBMAN™


www.mobman.ro

INSTRUCTIUNI TEHNICE GENERALE PENTRU MONTAJ MOBILIER

- VERIFICATI COMPATIBILITATEA PIESELOR SI ACCESORIILOR INAINTE DE MONTAJ.
- PENTRU MONTAJUL MOBILIERULUI, RECOMANDAM FOLOSIREA SERVICIILOR PERSOANELOR CALIFICATE.
- FACETI MONTAJUL PE O SUPRAFATA ACOPERITA CU PANZA SAU CARTON PENTRU A EVITA ZGARIETURILE.

INGRIJIREA SI INTRETINEREA MOBILIERULUI






- EVITATI CONTACTUL PRELUNGIT CU APA SAU CU ABURI.
- PASTRATI O DISTANTA CORESPUNZATOARE FATA DE APARATE ELECTRICE SI INCALZITOARE.
- INDEPARTATI MURDARIA CU O CARPA UMEDA APOI STERGETI. NU UTILIZATI MATERIALE ABRAZIVE.

1Surub
3,5x16**x24****W1**

Placa de montare


**x8****P6**

Cuiet

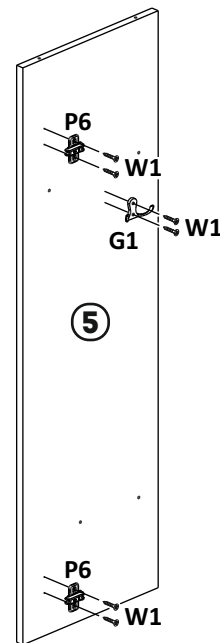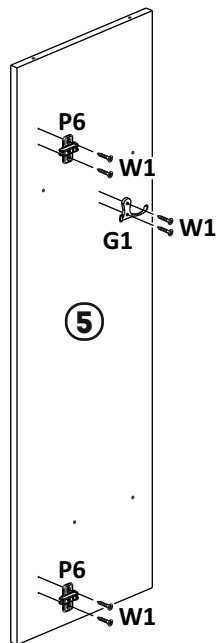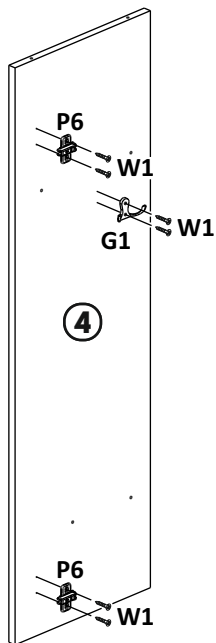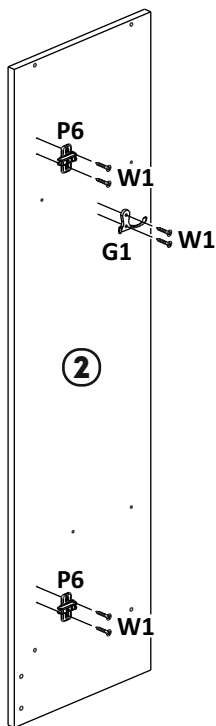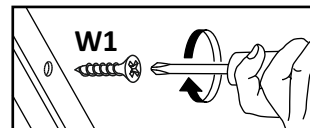**x4****G1**

2


Eurosurub



x12


A1

Capac surub




x12

A2

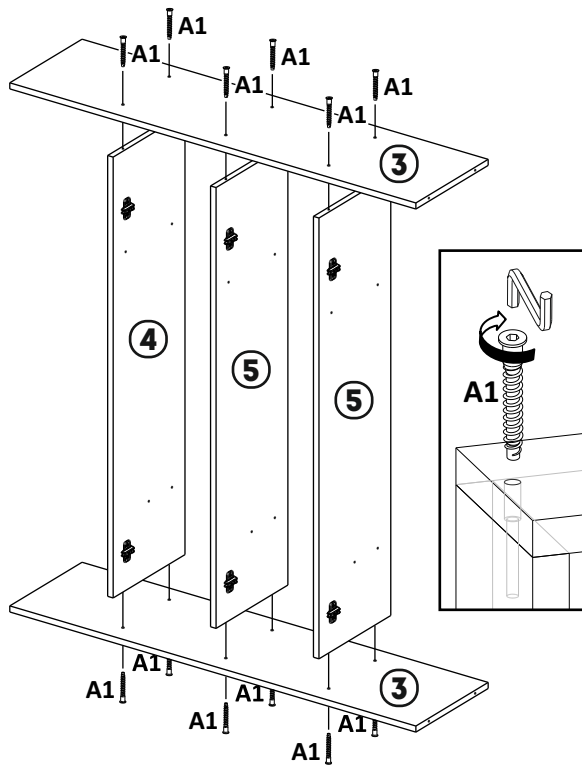**3**


Eurosurub



x8


A1

Suport polita



x32

L1

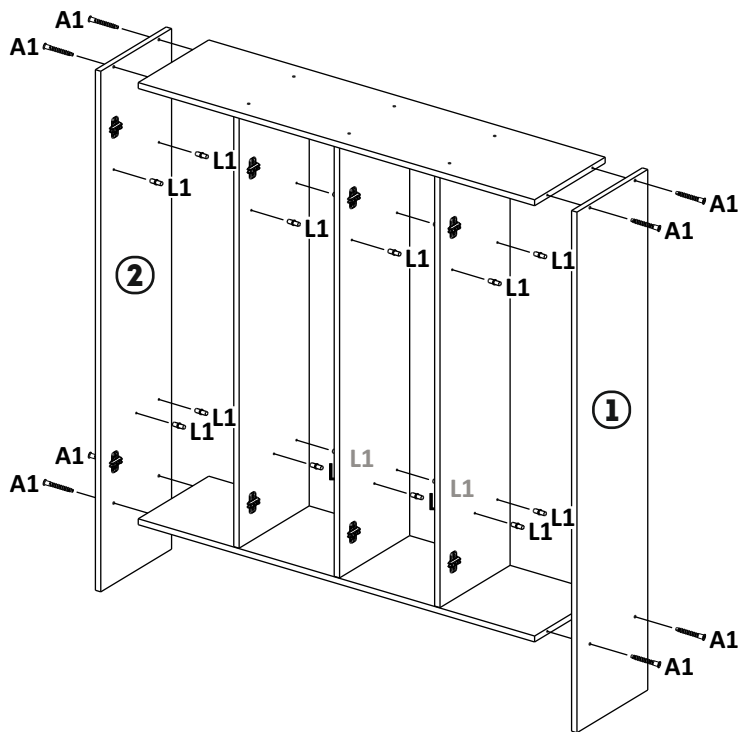

5

Alunecator plastic


x4




Q3

Clema fixare

x9





K3

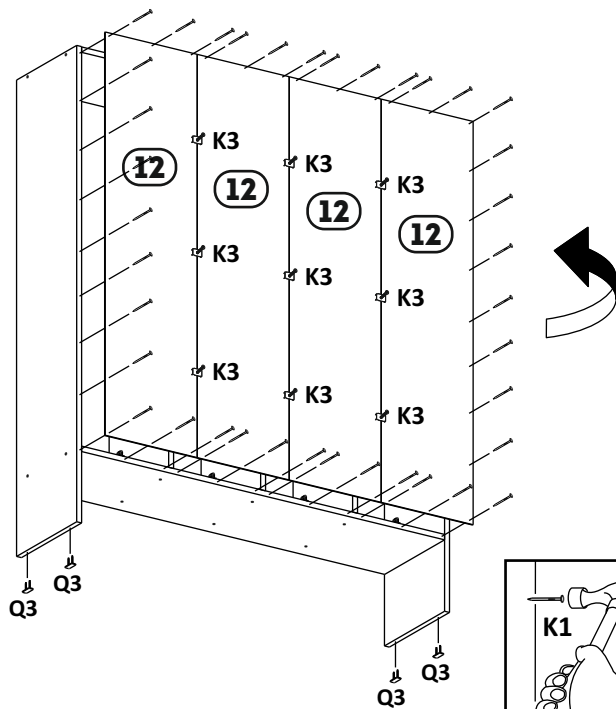**6**Amortizor de ușă
(silicon)

x4



B4

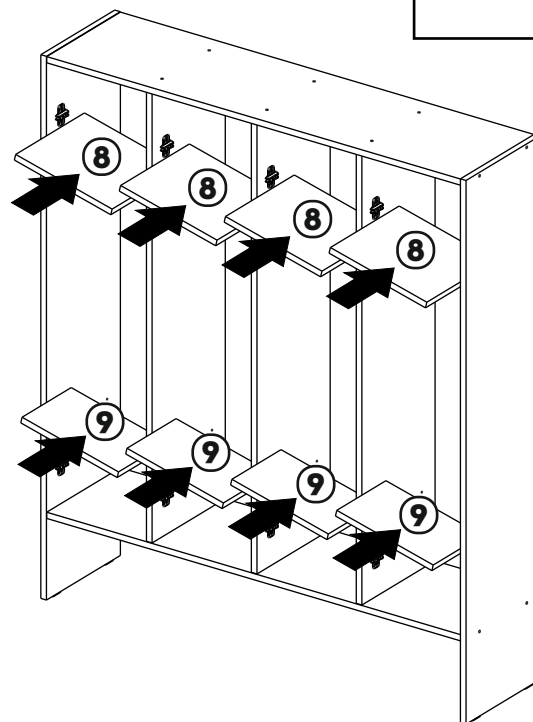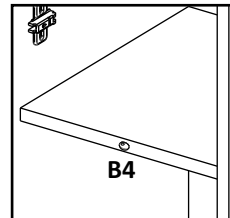**7**


7

Minifix




x6

M1

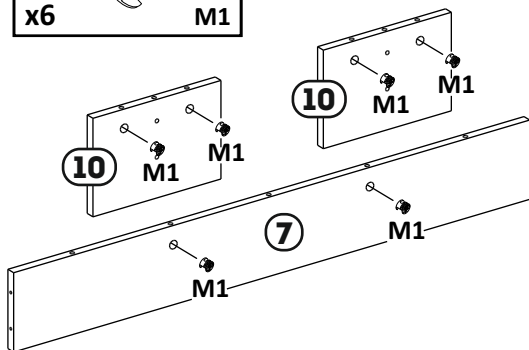
**8**

Eurosurb



x4

A1

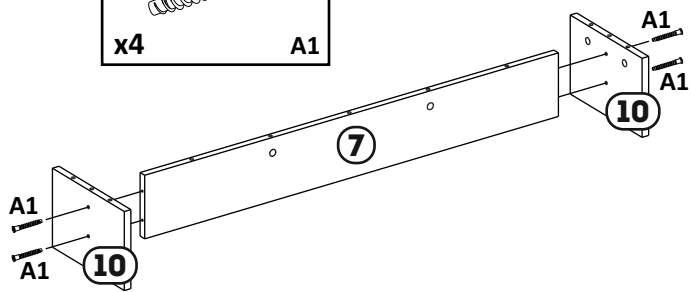**9**


Alunecator plastic



x4

Q3


Diblu



x4


C1

Surub Minifix




x6

M2

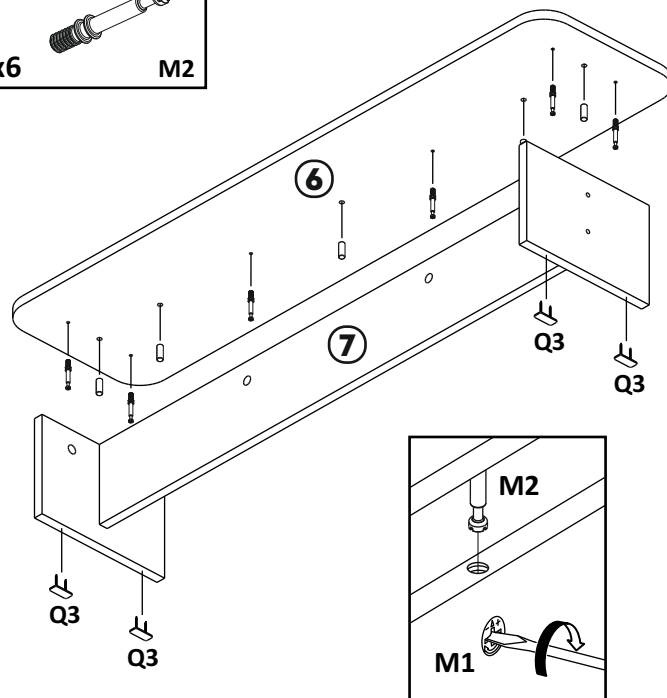

10


Balama incorporata



x2


P8

Surub
3,5x16



x4

W1

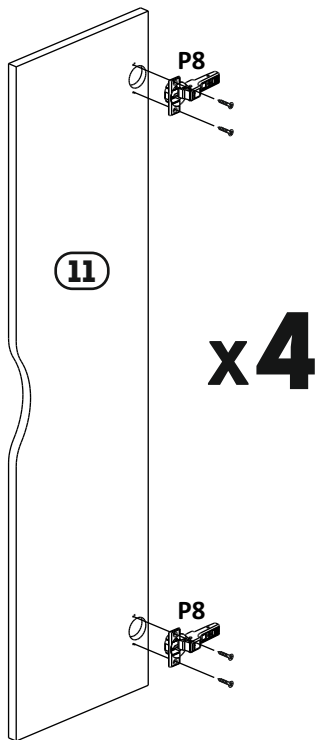

11

