





**MOBMAN™**

[www.mobman.ro](http://www.mobman.ro)

















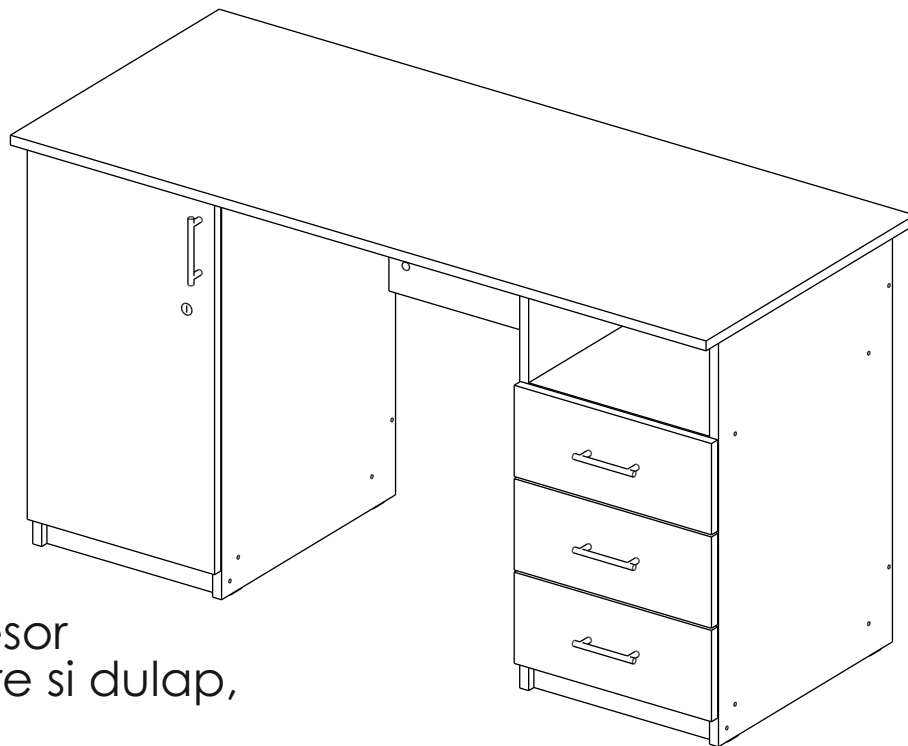





Catedra profesor  
Eliss cu 3 sertare si dulap,  
Fag  
(Model 11293)

18mm

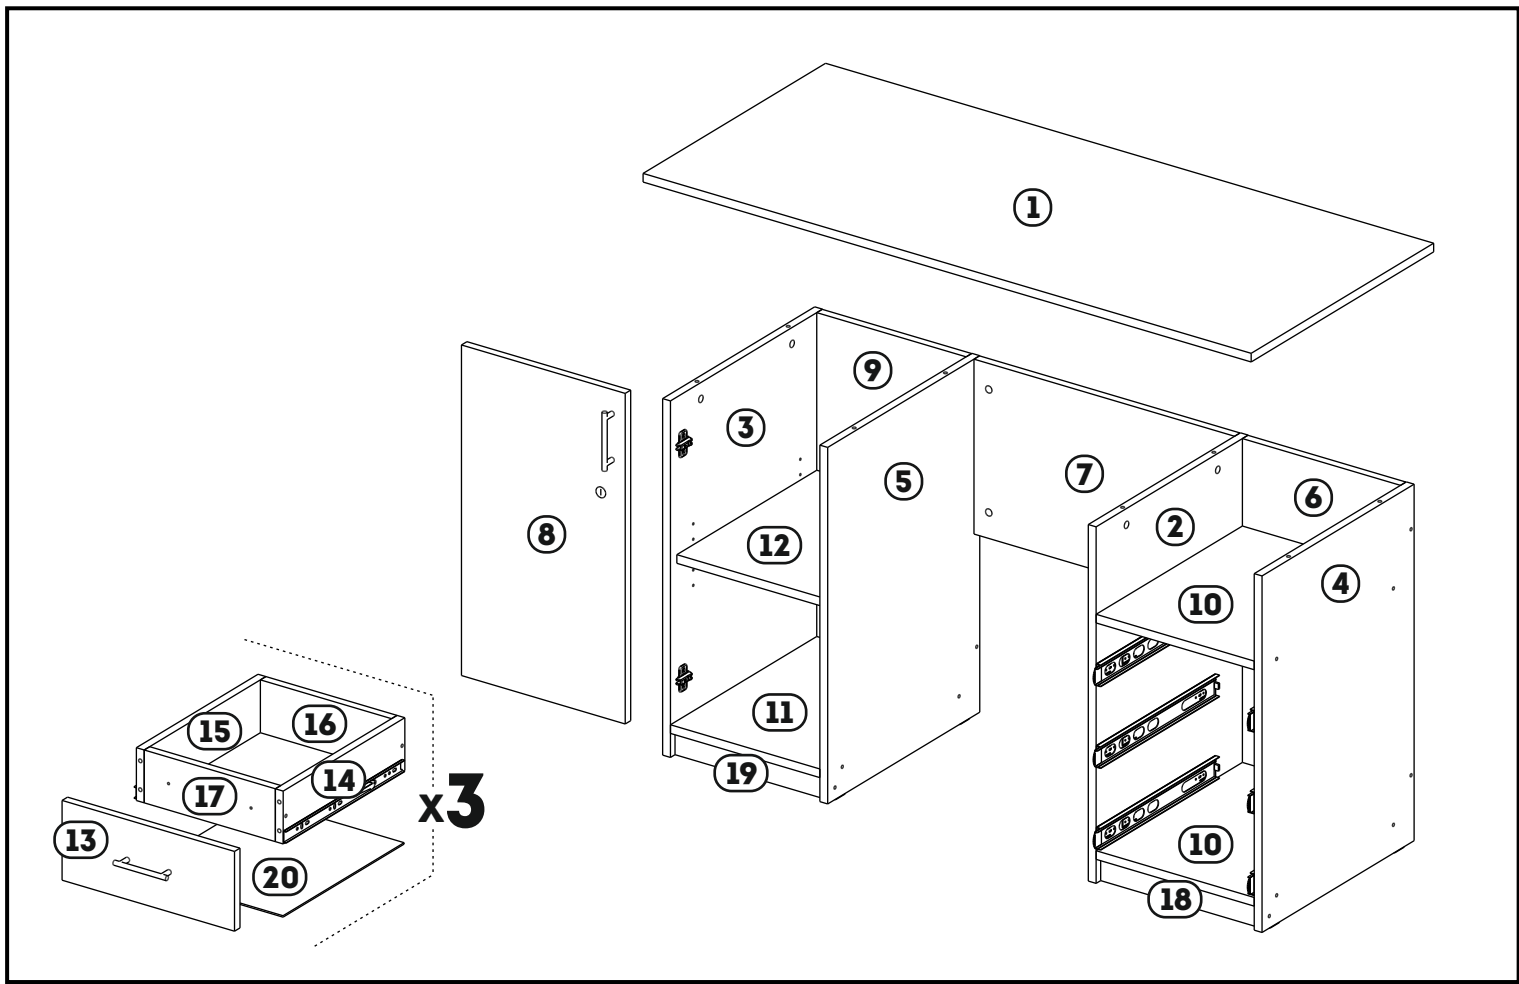

No	a*b	Bucati
1	1400x600	1
2	742x500	1
3	742x500	1
4	742x500	1
5	742x500	1
6	692x364	1
7	364x600	1
8	688x377	1
9	692x344	1
10	364x481	2
11	344x481	1
12	342x460	1
13	166x397	3
14	400x110	3
15	400x110	3
16	302x110	3
17	302x110	3
18	50x364	1
19	50x344	1
20	336x398	3

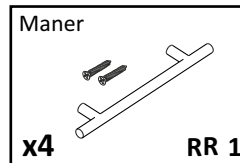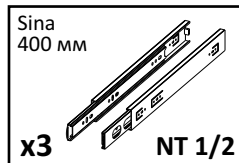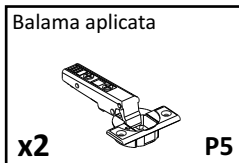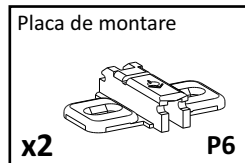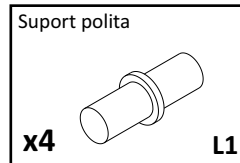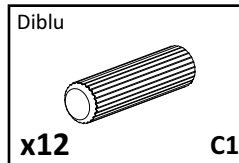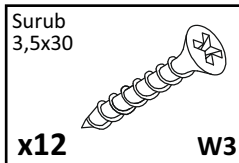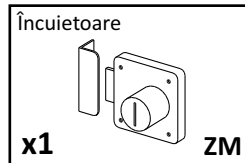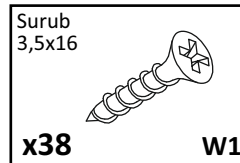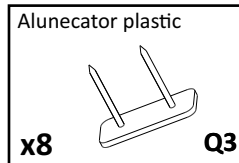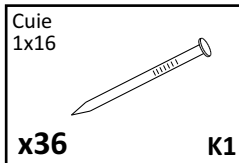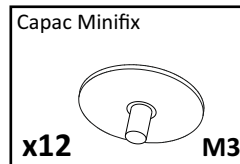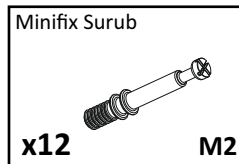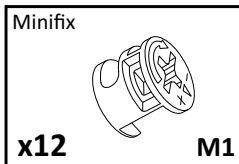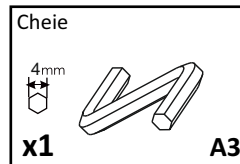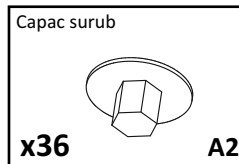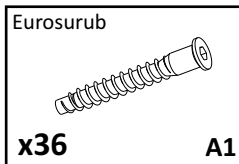

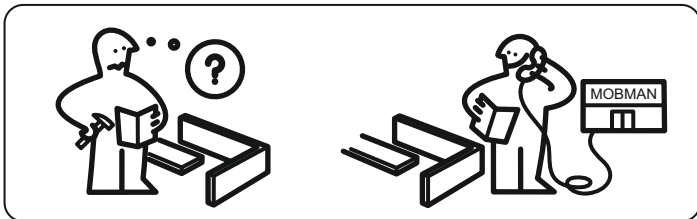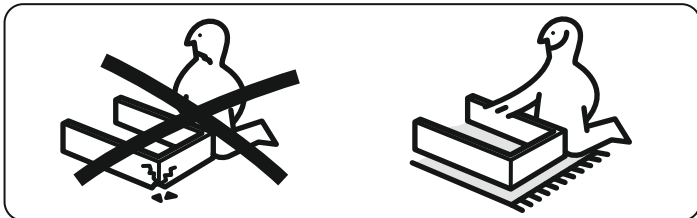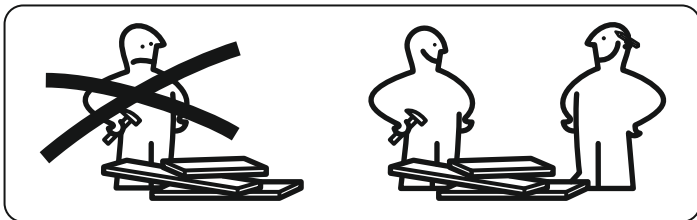

**ASISTENTA: 0371.71.79.79 SAU  
OFFICE@MOBMAN.RO**



**MOBMAN™**


www.mobman.ro

## **INSTRUCTIUNI TEHNICE GENERALE PENTRU MONTAJ MOBILIER**


- VERIFICATI COMPATIBILITATEA PIESELOR SI ACCESORIILOR INAINTE DE MONTAJ.
- PENTRU MONTAJUL MOBILIERULUI, RECOMANDAM FOLOSIREA SERVICIILOR PERSOANELOR CALIFICATE.
- FACETI MONTAJUL PE O SUPRAFATA ACOPERITA CU PANZA SAU CARTON PENTRU A EVITA ZGARIETURILE.

## **INGRIJIREA SI INTRETINEREA MOBILIERULUI**






- EVITATI CONTACTUL PRELUNGIT CU APA SAU CU ABURI.
- PASTRATI O DISTANTA CORESPUNZATOARE FATA DE APARATE ELECTRICE SI INCALZITOARE.
- INDEPARTATI MURDARIA CU O CARPA UMEDA APOI STERGETI. NU UTILIZATI MATERIALE ABRAZIVE.

**1**Surub  
3,5x16**x16****W1**

Minifix

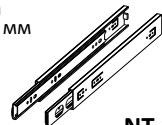
**x8****M1**Sina  
400 mm**x3****NT 1**

Placa de montare

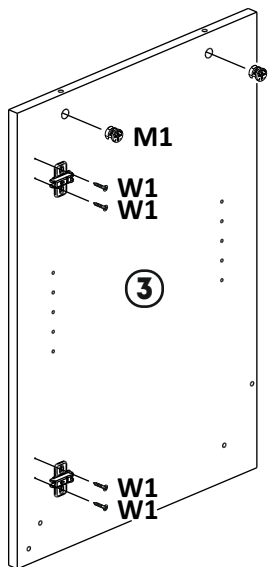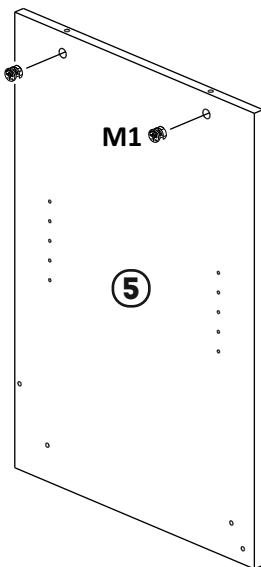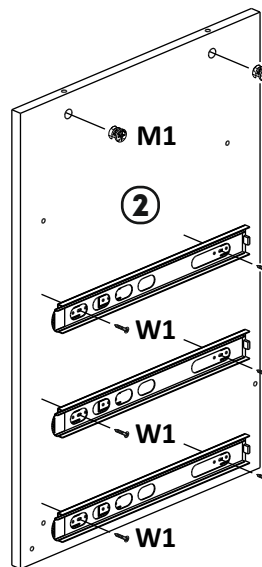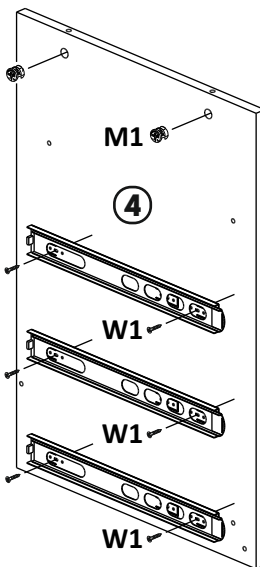**x2****P6****M1****M1****3****W1**  
**W1****M1****M1****5****2****M1****W1****W1****W1****W1****W1****4****M1****W1****W1****W1**

**2**


Eurosurb



x10



A1

Minifix Surub




x2

M2

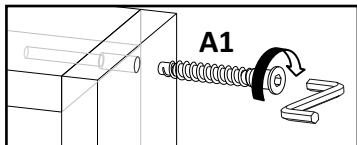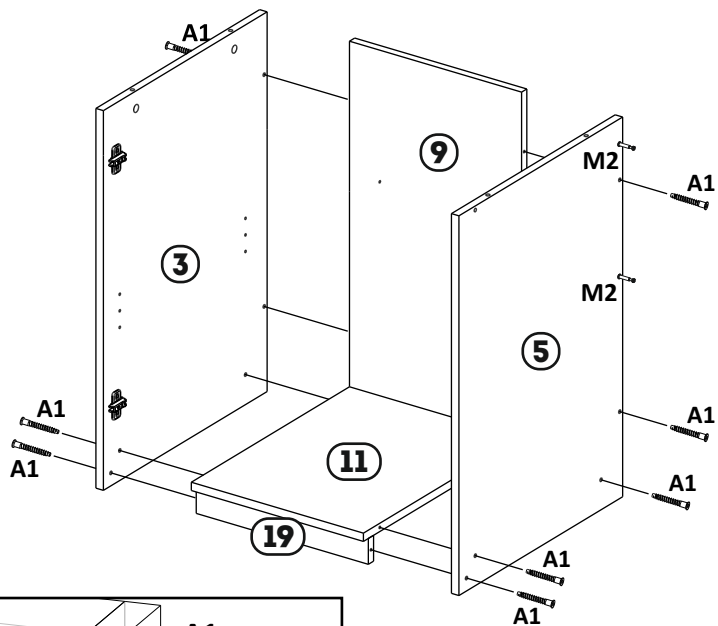**3**


Eurosurb



x14


A1

Minifix Surub



x2

M2

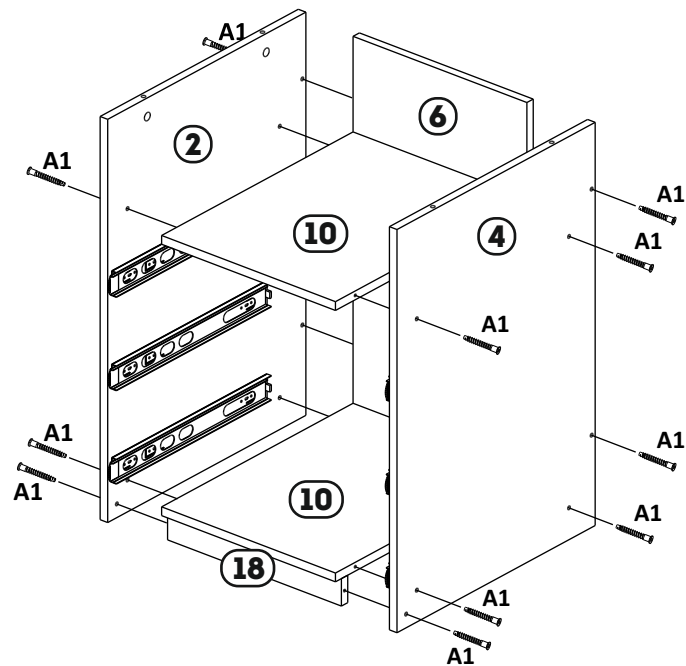

**4**

Minifix



x4



M1

Alunecator plastic



x8

Q3


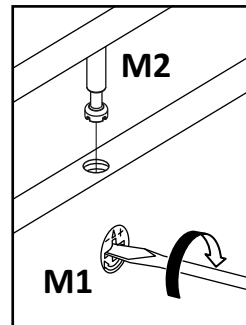
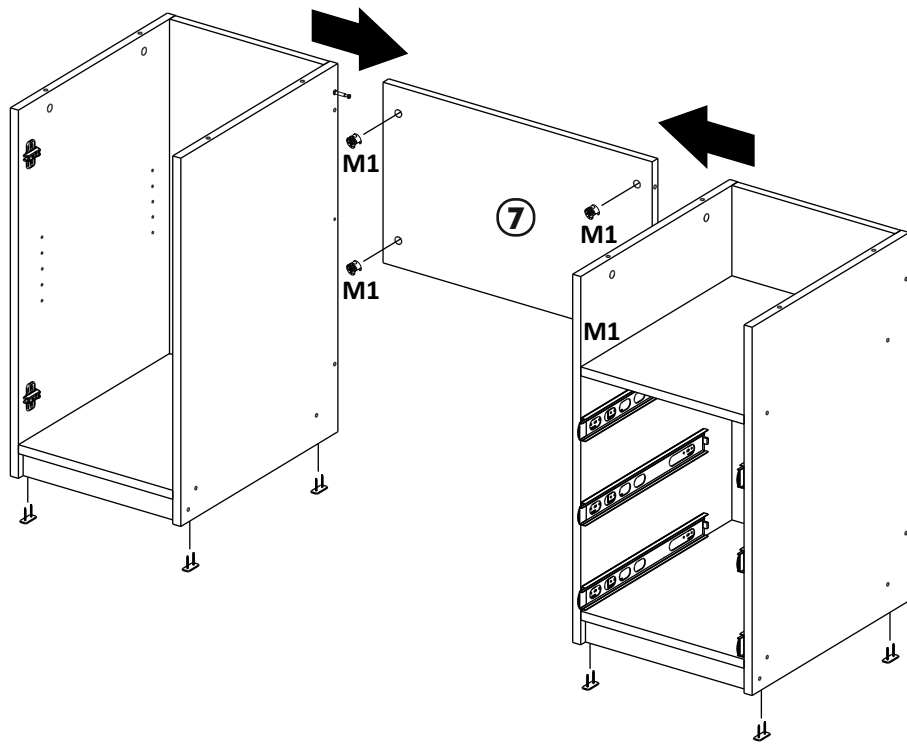


**5**

Minifix Surub

x8


M2

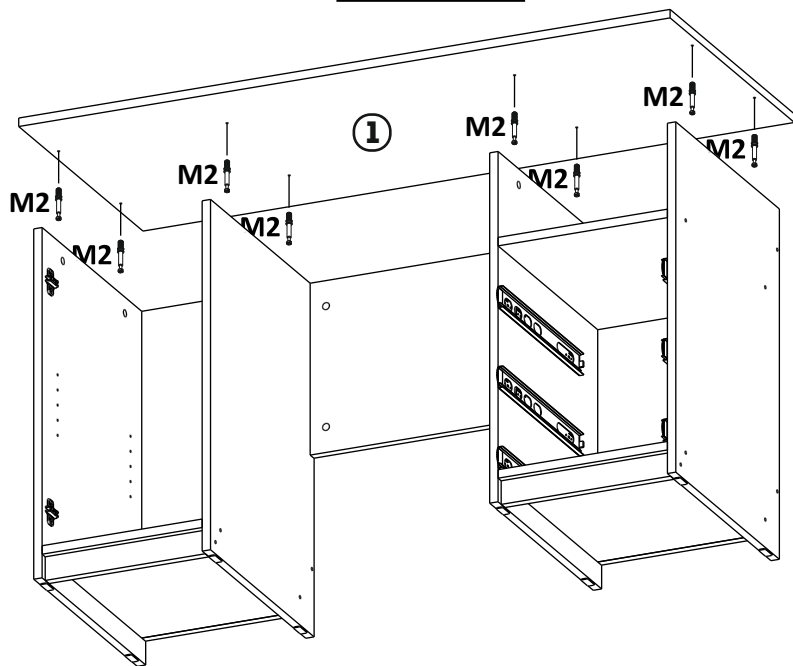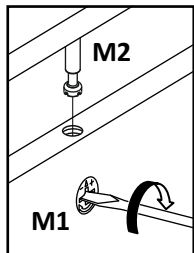**6**

Încuietoare

x1


ZM



Balama aplicata

x2


P5

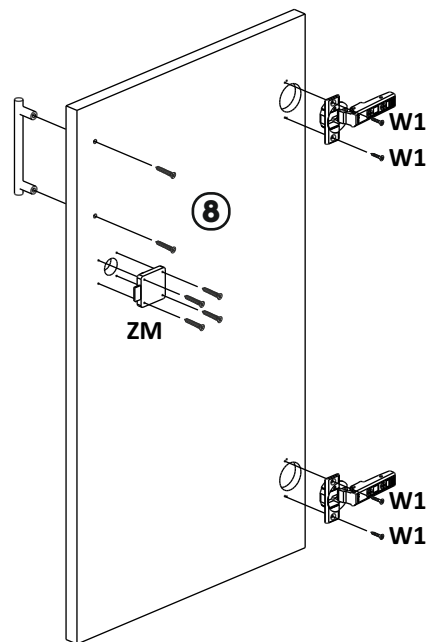







**7**





Eurosurb






**x8****A1**

Maner

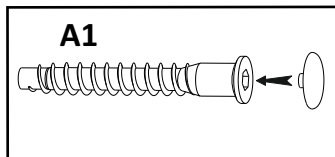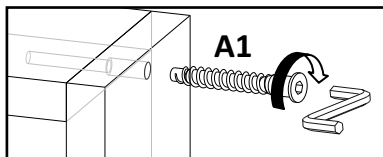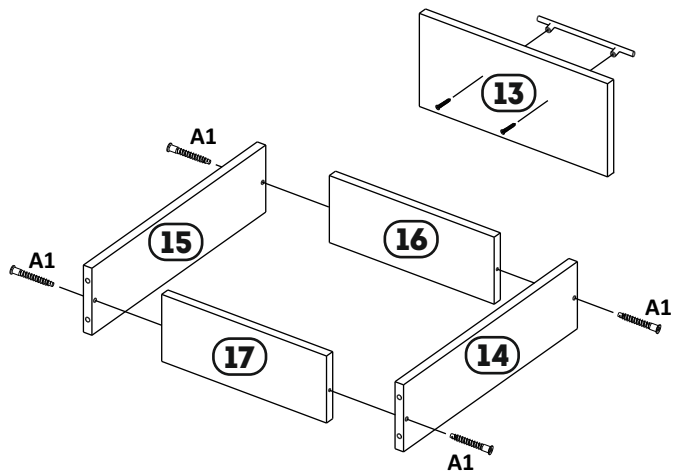**x1****RR 1****8**

Diblu

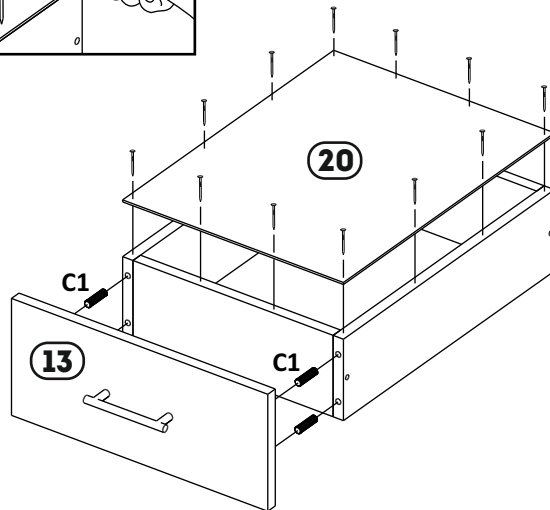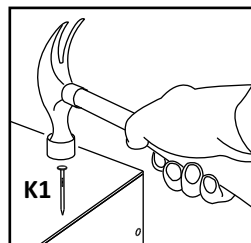**x4****C1**Cuie  
1x16**x12****K1**

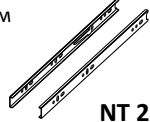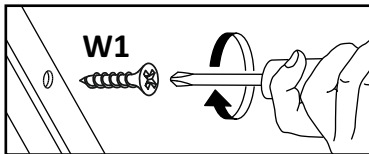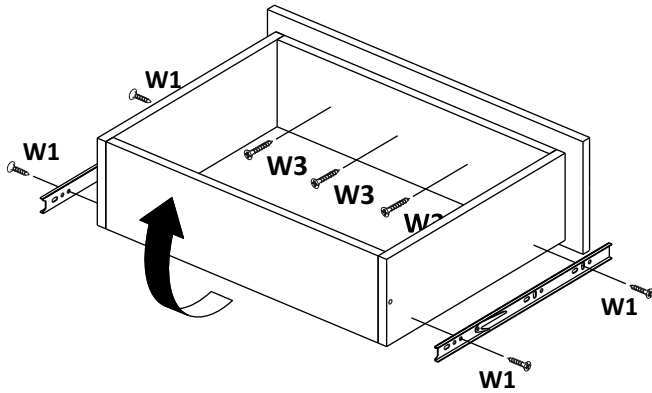**9**Surub  
3,5x16**x16****W1**Sina  
400 MM**x1****NT 2**Surub  
3,5x30**x4****W3****10**